
	MGT-MODE-3-003		
	V1.02		
			2024-12-12

1

1.1

1.2

	Plc()
Mc5000,Mc5100	
MEGreator	MC5000 MU
	MEGreator

2

2.1

- Mc5x00 Plc
- 1>. C C ,
- 2>. Plc , X, Y, M, S, SM, T, C; D, R, SD ,Z,F

X , D

3> , 64K


4> ANSI C , C

5> C ;


6>

2.2

1>

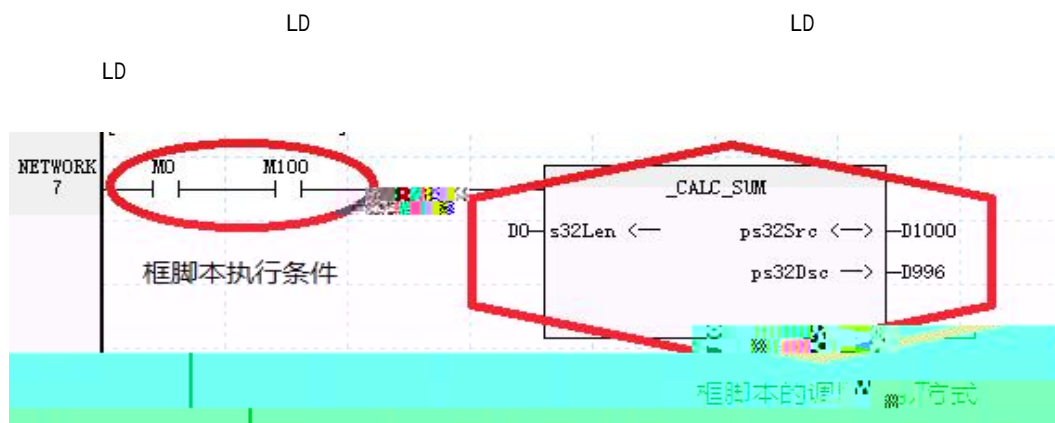


1

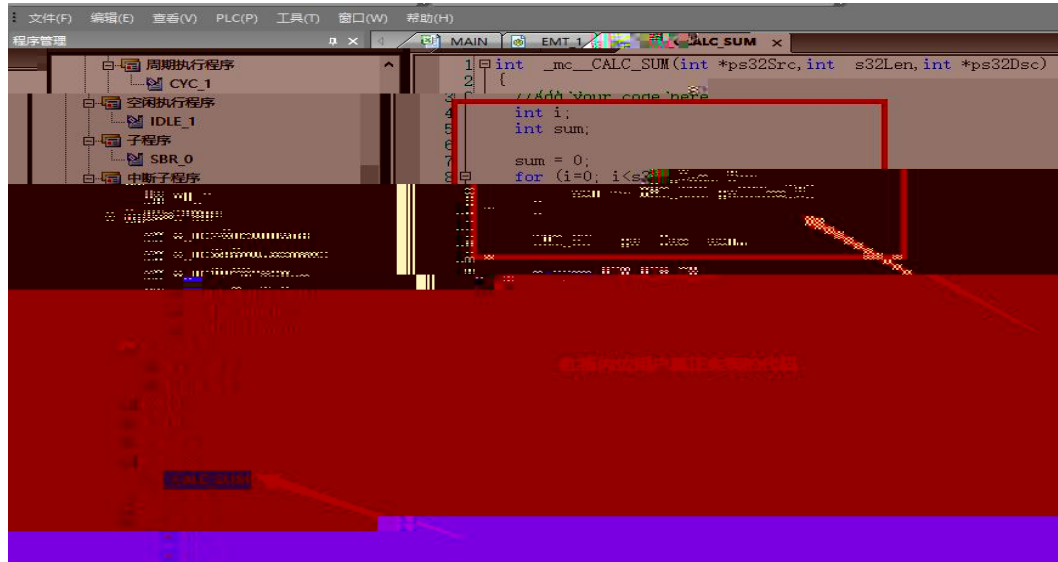

2

1>

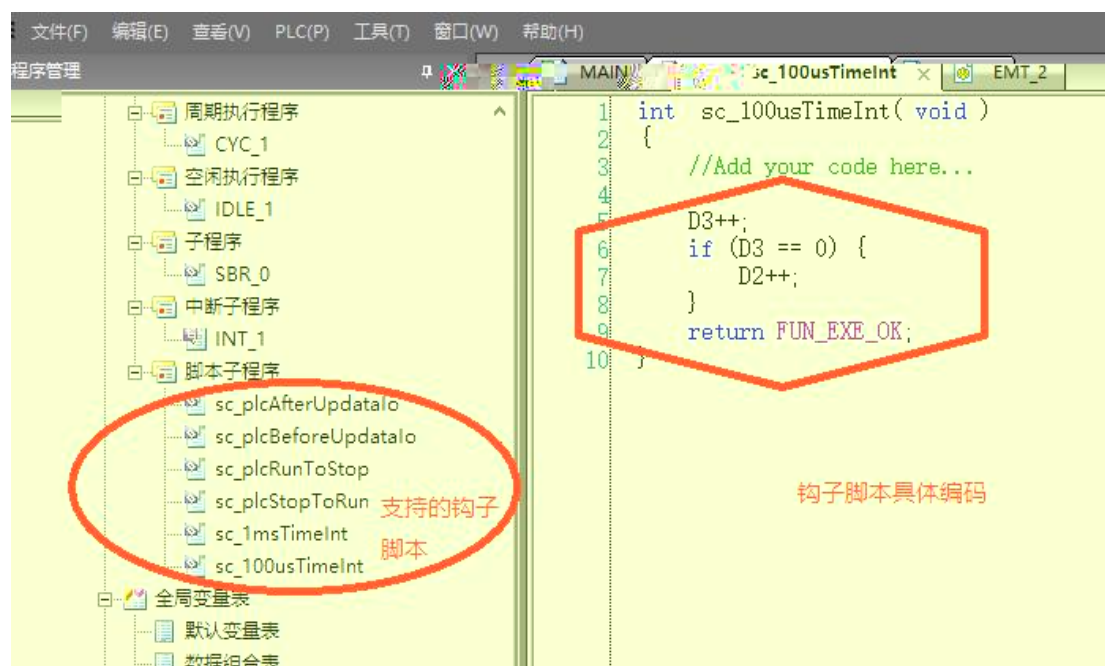

3

2.3

C

plc

export_module.h	Plc
user_common.c	
user_common.h	

3

xBuildC

D996(D100020000D998)

3.1

“ ” , “ ” “ ”

X_Build - [C:\Users\JungleYang\Documents\yWtScript\yWtScript.mgt] - [MAIN]

程序管理MAIN

yWtScript (MC5100)

程序块

全局变量表

默认变量表


数据组合表


数据块

系统块

扩展模块


变量地址	变量名称	变量类型	数据类型	注释
	TEMP		BOOL	
	TEMP		BOOL	
	TEMP		BOOL	

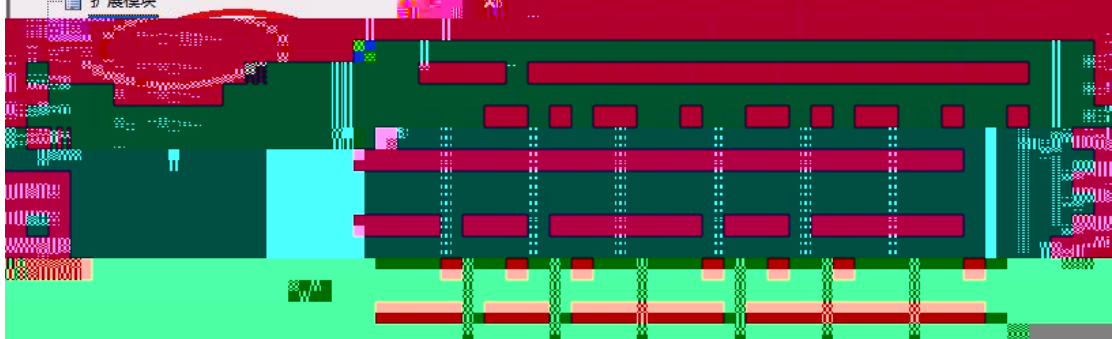

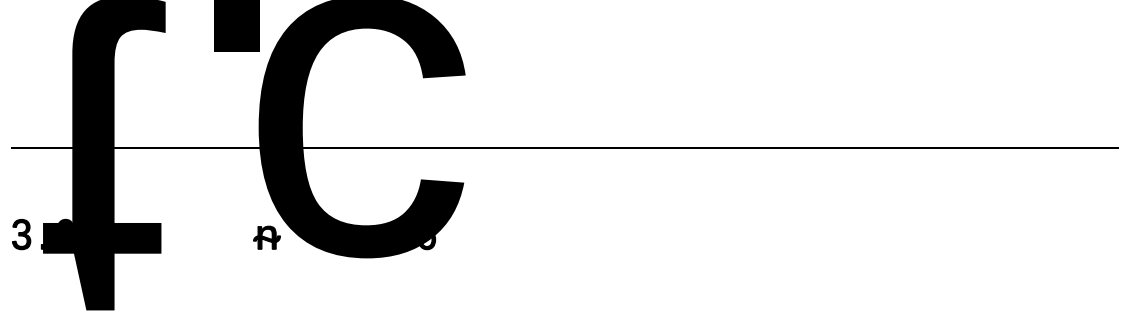


3.3

”_CALC_VALUE”

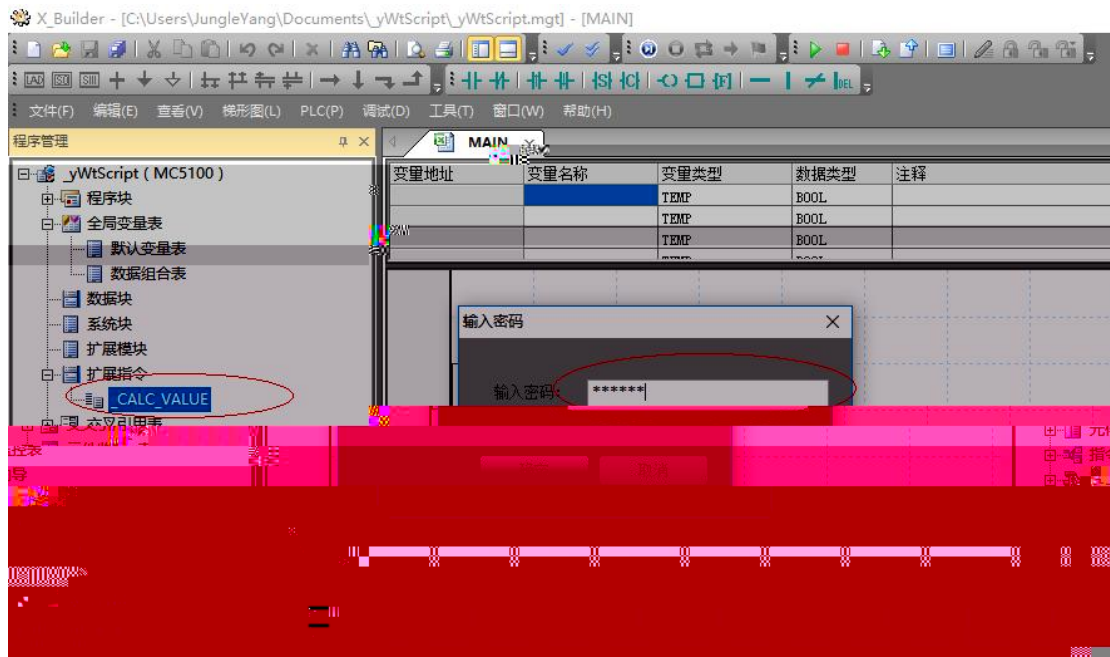


6

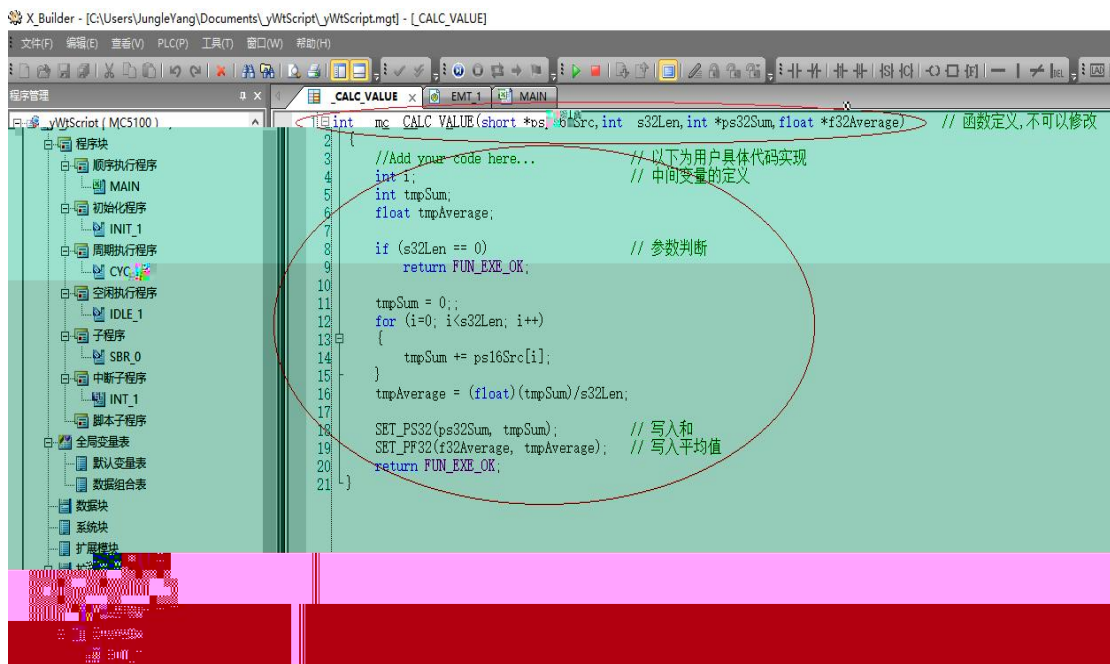

7


”C ”

3.4

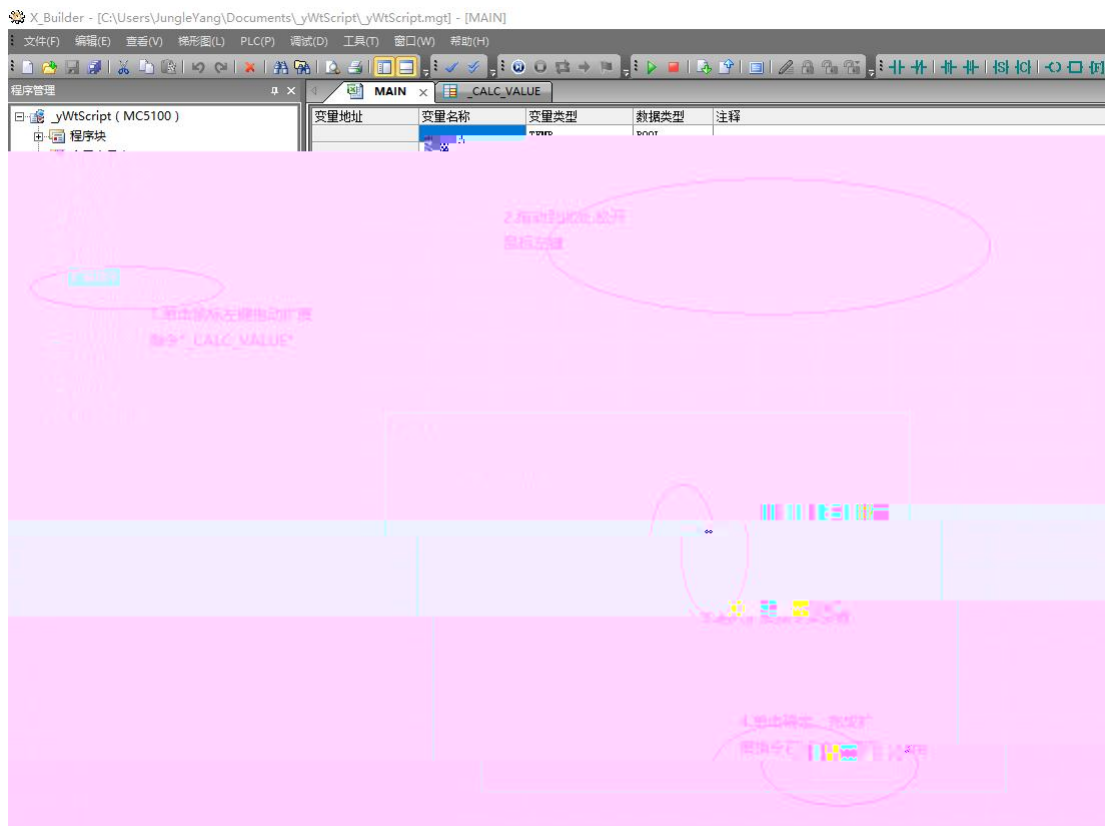


8

M10 M11 On ”_CALC_VALUE” _CALC_VALUE
D1000 20000 D996() D996()

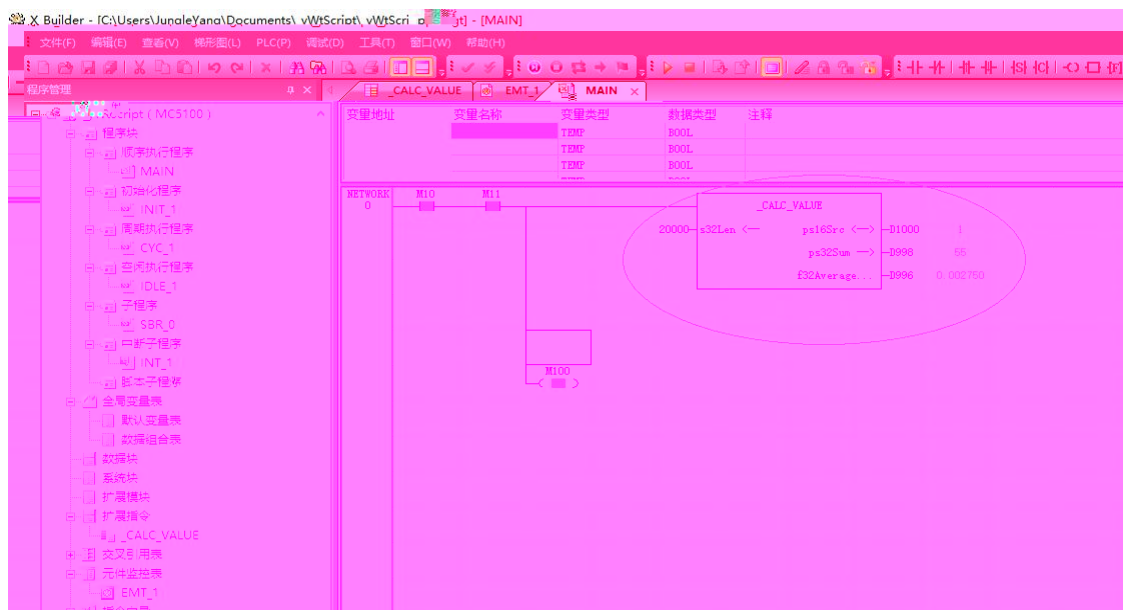

9

3.5

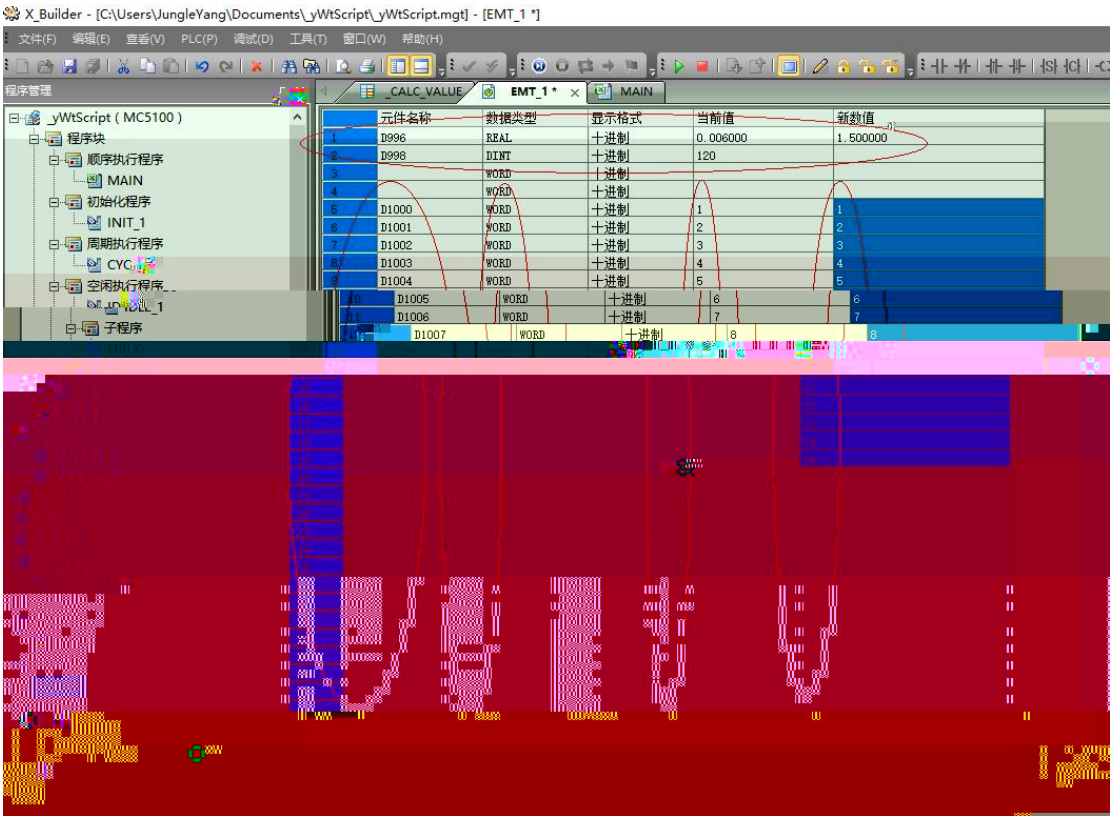

10

4

4.1

4.1.1 X

	X
	PLC
	X0 ~ X7777
	Bit
	8 , 'X'

```

int _mc_BitOp()
{
    //Add your code here...
    if ( X4 )
    {
        Y10 = 1;
    }
}

```

8进制编号

4.1.2 Y

	Y
	PLC
	Y0 ~ Y7777
	Bit
	8 , 'Y'

```

int _mc_BitOp()
{
    //Add your code here...
    if ( X4 )
    {
        Y10 = 1;
    }
}

```

Y位元件输入，编号位8进制

4.1.3 SM

	SM
	PLC SM
	SM0 ~ SM4095
	Bit
	10 , 'SM'

```

int _mc_BitOp()
{
    //Add your code here...
    if ( X4 )
    {
        SM[40]=1;
        SM41=1;
    }
}

```

SM位元件支持SMxx及SM[xx]

4.1.4 S

	S
	PLC S
	S0 ~ S4095
	Bit
	10 , 'S'

```
int _mc_BitOp()
{
    //Add your code here...
    if ( X4 )
    {
        S[100]=1;
        S101 = 1;
    }
}
```

S位元件支持Sxx及S[xx]输入，编号为十进制

4.1.5 T

	T
	PLC T
	T0 ~ T4095
	Bit
	10 , 'T'

```
int _mc_BitOp()
{
    //Add your code here...
    if (T10)
    {
        D[102] = 20;
    }
}
```

T元件位变量，支持Txx及T[xx]输入，十进制编号

4.1.6 C

	C
	PLC C
	C0 ~ C4095
	Bit
	10 , 'C'

```
int _mc_BitOp()
{
    //Add your code here...
    if (C10)
    {
        //Add your code here...
    }
}
```

C位元件输入格式支持Cx及C[xx]，十进制编号

4.1.7 M

	C
	PLC M
	M0 ~ M65535
	Bit
	10 , 'M'

```
int _mc_BitOp()
{
    //Add your code here...
```



4.1.8 SD

	SD
	PLC SD
	SD0 ~ SD4095
	signed short
	10 , 'SD'

```
int _mc_BitOp()
{
    //Add your code here...
```

```
if ( X4 )
{
    D110 = SD101;
    D[111] = SD[102];
```

SD支持SDxx及SD[xx]

4.1.9 Z

	Z
	PLC Z
	Z0 ~ Z4095
	signed short
	10 , 'Z'

```
int _mc_BitOp()
{
    //Add your code here...
```

```
if ( X4 )
{
    Z110 = 10;
    Z[4095] = 100;
```

7字节元件支持Zxx及Z[xx]读写

4.1.10 D

	D
	PLC D
	D0 ~ D65535
	signed short
	10 , 'D'

```
int _mc__BitOp()
{
    //Add your code here...
    if ( X4 )
    {
        D110 = SD101;
        D[111] = SD [102];
    }
```

D字单元直接读写支持Dxx及D[xx]

4.1.11 R

	R
	PLC R
	R0 ~ R65535
	signed short
	10 , 'R'

```
int _mc__BitOp()
{
    //Add your code here...
    if ( X4 )
    {
        R[4095] = 100;
    }
```

R字变量支持Rxx及R[xx]直接读写操作

4.2

MC5000

PLC

32

4.2.1

	int GET_DD(unsigned short stNum)
	“ D ”
	stNum: D
	int,

--	--

```
int _mc_BitOp()
{
    //Add your code here...
    if ( X4 )
    {
        long tmp;
        tmp = GET_DD(1000);
```

读取D1000长整型数据到tmp

4.2.2

	void SET_DD(unsigned short stNum, int val)
	“ D ”
	stNum: D
	val :

```
int _mc_BitUp()
{
    //Add your code here...
    if ( X4 )
    {
        long tmp;
        tmp = GET_DD(1000);
        SET_DD(150, tmp);
```

将tmp值写入到长整数D150中

4.2.3


	int GET_MutiDD(int stNum, int len, int *ps32Dsc)
	“ D ”
	stNum: D
	Len :
	ps32Dsc:
	0 ,

4.2.4

4.2.4

	int SET_MutiDD(int stNum, int len, int *ps32Src)
	“ D ”
	stNum: D
	Len :

	ps32Dsc:	D
	0	,

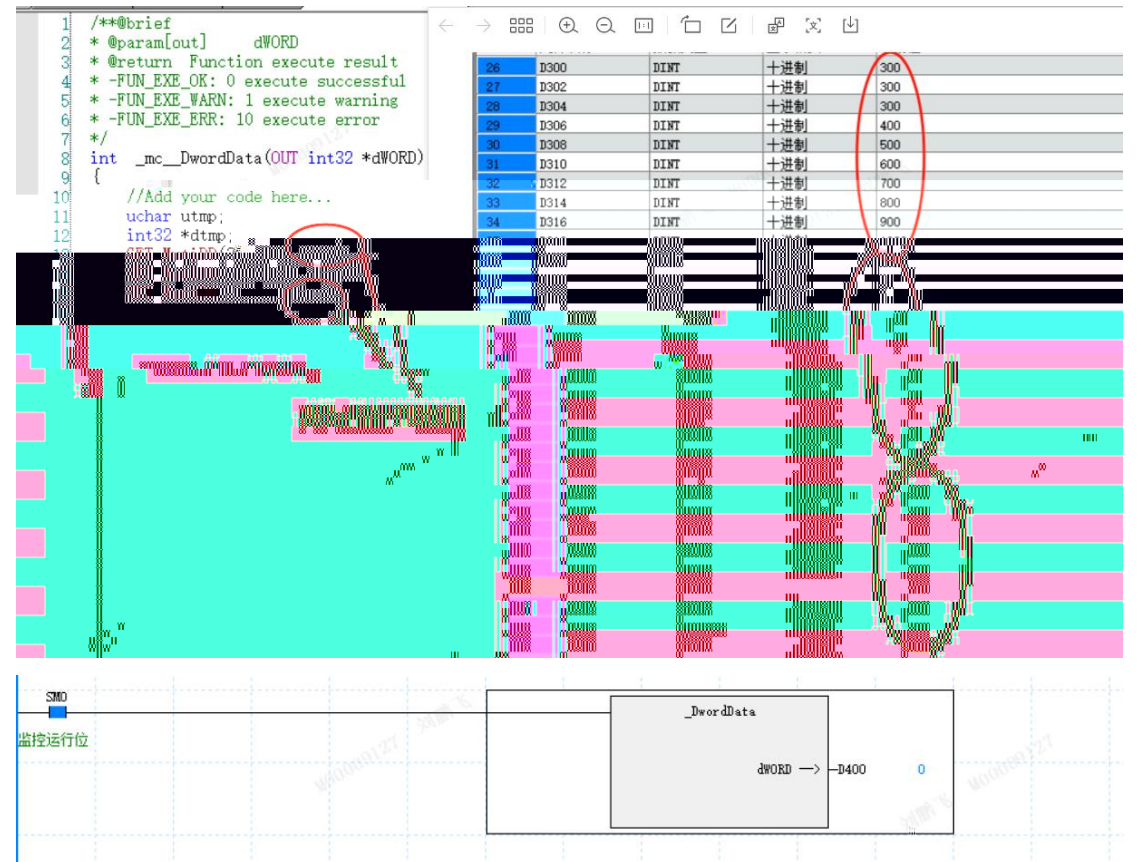

1 GET_MutiDD(int stNum, int len, int *ps32Dsc)
SET_MutiDD(int stNum, int len, int *ps32Src) D
 dWORD D400 D400 10

2 int *ps32Dsc int *ps32Src

4.2.5

	float GET_FD(unsigned short stNum)
	“ D ”
	stNum: D
	float,

4.2.6

4.2.6

	void SET_FD(unsigned short stNum, float val)
	“ D ”
	stNum: D
	val :

```
int _mc__DwordData(OUT int32 *dWORD)
{
    //Add your code here...
    uchar utmp;
    int32 *dtmp;
    float fTmp, *pfTmp;
    fTmp = GET_FD(600);
    SET_FD(700, fTmp);
```

读取d600内浮点数存入变量fTmp中

将浮点数fTmp的值写入D700中

4.2.7

	int GET_MutiFD(int stNum, int len, float *pf32Dsc)
	“ D ”
	stNum: D
	Len :
	ps32Dsc:
	0 ,

4.2.8

4.2.8

	int SET_MutiFD(int stNum, int len, float *pf32Src)
	“ D ”
	stNum: D
	Len :
	ps32Dsc: D
	0 ,


```
int _mc_DwordData(OUT int32 *dWORD)
{
    //Add your code here...
    uchar utmp;
    int32 *dtmp;
    float fTmp, *pfTmp;
    int i = 610;
    GET_MutiFD(i, 5, pfTmp);
    SET_MutiFD(i+20, 5, pfTmp);
}
```

读取从D610开始的5个浮点数,存入指针变量pfTmp中

将指针变量pfTmp中连续5个浮点数存入D630开始地址

i 16

4.2.9

R D

	int GET_DR(unsigned short stNum)
	“ R ”
	stNum: R
	int,

4.2.10

	void SET_DR(unsigned short stNum, int val)
	“ R ”
	stNum: R
	val :

4.2.11

	int GET_MutiDR(int stNum, int len, int *ps32Dsc)
	“ R ”
	stNum: R
	Len :
	ps32Dsc:
	0 ,

4.2.12

	int SET_MutiDR(int stNum, int len, int *ps32Src)
	“ R ”
	stNum: R
	Len :
	ps32Dsc: R
	0 ,

4.2.13

	float GET_FR(unsigned short stNum)
	“ R ”
	stNum: R
	float,

4.2.14

	void SET_FR(unsigned short stNum, float val)
	“ R ”
	stNum: R
	val :

4.2.15

	int GET_MutiFR(int stNum, int len, float *pf32Dsc)
	“ R ”
	stNum: R
	Len :
	ps32Dsc:

	0	,

4.2.16

	int SET_MutiFR(int stNum, int len, float *pf32Src)
	“ R ”
	stNum: R
	Len :
	ps32Dsc: R
	0 ,

4.2.17

	int GET_DF(int stNum)
	“ F ”
	stNum: F
	int,

4.2.34 F0~F9

4.2.18

	void SET_DF(int stNum, int val)
	“ F ”
	stNum: F
	val :

4.2.34 F0~F9

4.2.19

	int GET_MutiDF(int stNum, int len, int *ps32Dsc)
	“ F ”

	stNum: F
	Len :
	ps32Dsc:
	0 ,

4.2.34 F0~F9

4.2.20

	int SET_MutiDF(int stNum, int len, int *ps32Src)
	" F "
	stNum: F
	Len :
	ps32Dsc: F
	0 ,

4.2.34 F0~F9

4.2.21

	float GET_FF(unsigned short stNum)
	" F "
	stNum: F
	float,

4.2.34 F0~F9

4.2.22

	void SET_FF(unsigned short stNum, float val)
	" F "
	stNum: F
	val :

4.2.34 F0~F9

4.2.23

	int GET_MutiFF(int stNum, int len, float *pf32Dsc)
	“ F ”
	stNum: F
	Len :
	ps32Dsc:
	0 ,

4.2.34 F0~F9

4.2.24

	int SET_MutiFF(int stNum, int len, float *pf32Src)
	“ F ”
	stNum: F
	Len :
	ps32Dsc: F
	0 ,

4.2.34 F0~F9

4.2.25

	int GET_DF0(int stNum)
	int GET_DF1(int stNum)
	int GET_DF2(int stNum)
	int GET_DF3(int stNum)
	int GET_DF4(int stNum)
	int GET_DF5(int stNum)
	int GET_DF6(int stNum)
	int GET_DF7(int stNum)
	int GET_DF8(int stNum)
	int GET_DF9(int stNum)
	“ Fx ”
	stNum: Fx
	int,

4.2.34 F0~F9

4.2.26

	void SET_DF0(int stNum, int val)
	void SET_DF1(int stNum, int val)
	void SET_DF2(int stNum, int val)
	void SET_DF3(int stNum, int val)
	void SET_DF4(int stNum, int val)
	void SET_DF5(int stNum, int val)
	void SET_DF6(int stNum, int val)
	void SET_DF7(int stNum, int val)
	void SET_DF8(int stNum, int val)
	void SET_DF9(int stNum, int val)
	“ Fx ”
	stNum: Fx
	val :

4.2.34 F0~F9

4.2.27

	int GET_MutiDF0(int stNum, int len, int *ps32Dsc)
	int GET_MutiDF1(int stNum, int len, int *ps32Dsc)
	int GET_MutiDF2(int stNum, int len, int *ps32Dsc)
	int GET_MutiDF3(int stNum, int len, int *ps32Dsc)
	int GET_MutiDF4(int stNum, int len, int *ps32Dsc)
	int GET_MutiDF5(int stNum, int len, int *ps32Dsc)
	int GET_MutiDF6(int stNum, int len, int *ps32Dsc)
	int GET_MutiDF7(int stNum, int len, int *ps32Dsc)
	int GET_MutiDF8(int stNum, int len, int *ps32Dsc)
	int GET_MutiDF9(int stNum, int len, int *ps32Dsc)
	“ Fx ”
	stNum: Fx
	Len :
	ps32Dsc:
	0 ,

4.2.34 F0~F9

4.2.28

	int SET_MutiDF0(int stNum, int len, int *ps32Src)
	int SET_MutiDF1(int stNum, int len, int *ps32Src)
	int SET_MutiDF2(int stNum, int len, int *ps32Src)
	int SET_MutiDF3(int stNum, int len, int *ps32Src)
	int SET_MutiDF4(int stNum, int len, int *ps32Src)
	int SET_MutiDF5(int stNum, int len, int *ps32Src)
	int SET_MutiDF6(int stNum, int len, int *ps32Src)
	int SET_MutiDF7(int stNum, int len, int *ps32Src)
	int SET_MutiDF8(int stNum, int len, int *ps32Src)
	int SET_MutiDF9(int stNum, int len, int *ps32Src)
	“ F ”
	stNum: F
	Len :
	ps32Dsc: F
	0 ,

4.2.34 F0~F9

4.2.29


	float GET_FF0(unsigned short stNum)
	float GET_FF1(unsigned short stNum)
	float GET_FF2(unsigned short stNum)
	float GET_FF3(unsigned short stNum)
	float GET_FF4(unsigned short stNum)
	float GET_FF5(unsigned short stNum)
	float GET_FF6(unsigned short stNum)
	float GET_FF7(unsigned short stNum)
	float GET_FF8(unsigned short stNum)
	float GET_FF9(unsigned short stNum)
	“ Fx ”
	stNum: Fx
	float,

4.2.34 F0~F9

4.2.34

	void SET_F0(int stNum, signed short val)
	void SET_F1(int stNum, signed short val)
	void SET_F2(int stNum, signed short val)
	void SET_F3(int stNum, signed short val)
	void SET_F4(int stNum, signed short val)
	void SET_F5(int stNum, signed short val)
	void SET_F6(int stNum, signed short val)
	void SET_F7(int stNum, signed short val)
	void SET_F8(int stNum, signed short val)
	void SET_F9(int stNum, signed short val)
	“ Fx ”
	stNum: Fx
	val :

F0~F9

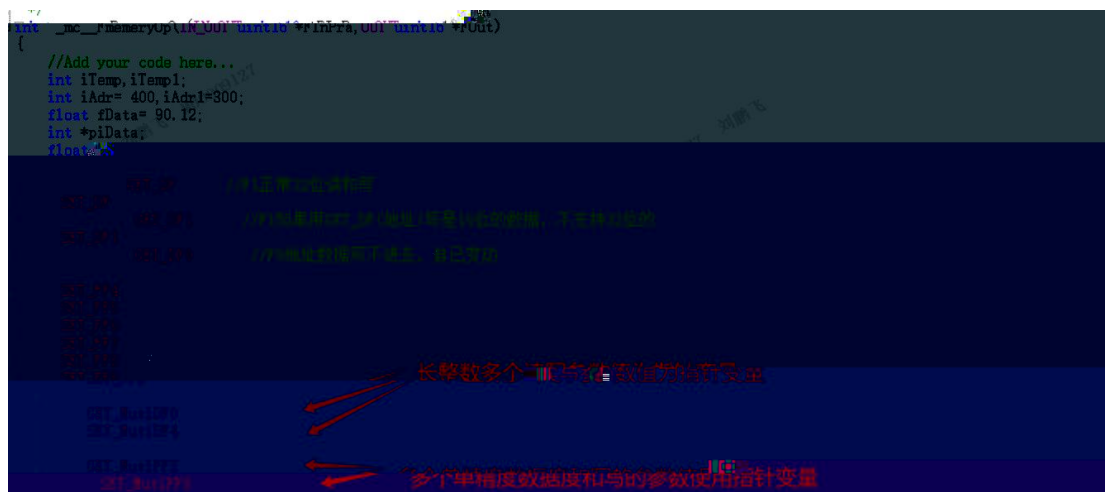

4.2.35

	void SET_PS32(int *ps32Dsc, int s32Src)
	s32Src ps32Dsc
	s32Src:
	ps32Dsc:

```

#define I32 *(int32 *)&D
#define FD *(float *)&D
#define DR *(int32 *)&R
int _mc_pointerOP(IN int32 InPra, IN_OUT uint16 *IOPra, OUT uint16 *OPra)
{
    //Add your code here...

    int *Adr1,*Adr2,Adr3 = 620;
    long dInt1;

    float fData1,*fData2;
    float fTemp = 568.12;
    long DTemp = 654321;
    long temp;

    Adr1 = &D600;
    Adr2 = &R550;

```

写入寄存器指向的地址
被写数据为立即数

Adr1 D600 Adr2

R550

4.2.36

	int GET_PS32(int *ps32Src)
	int
	ps32Src:

```

#define I32 *(int32 *)&D
#define FD *(float *)&D
#define DR *(int32 *)&R
int _mc_pointerOP(IN int32 InPra, IN_OUT uint16 *IOPra, OUT uint16 *OPra)
{
    //Add your code here...

    int *Adr1,*Adr2,Adr3 = 620;
    long dInt1,*dInt2;

    float fData1,*fData2;
    float fTemp = 568.12;
    long DTemp = 654321;
    long temp;

    Adr1 = &D600;
    Adr2 = &R550;

    GET_PS32(Adr1,DTemp); //Adr1为指针，将长整数fTemp的值写入Adr1指向的地址。(大小端调整)
    dInt1 = GET_PS32(IOPra); //将寄存器R550指向的地址的值读出来，赋给dInt1。
    SET_PS32(Adr1+1,dInt1); //将dInt1的值经大小端调整后赋给指针(Adr1+1)指向的地址

```

操作数为指向地址的指针

IOPra

4.2.37

	int GET_S32(int s32Src)
	int 32
	s32Src:

	PLC

*1

```
#define DD *(int32 *)&D
#define FD *(float *)&D
#define D650 *(int32 *)&D650

// 将长整型dInt的值经大小端调整后赋给变量Temp
// 将经过大小端调整的长整型结果Temp的值直接赋给D650
// 将dInt+10后的值经大小端调整后赋给地址D650
// 将dInt+10后的值经大小端调整后赋给地址D650
```

4.2.38

	void SET_PU32(unsigned int *pu32Dsc, unsigned int u32Src)
	u32Src pu32Dsc
	u32Src:
	pu32Dsc:

4.4.23

4.2.39

	unsigned int GET_PU32(unsigned int *pu32Src)
	int
	pu32Src:

4.4.23

4.2.40

	unsigned int GET_U32(unsigned int u32Src)
	Unsigned int 32
	u32Src:
	PLC

*2

[illegible]

4.2.41

	void SET_PF32(float *pf32Dsc, float f32Src)
	f32Src pf32Dsc
	f32Src:
	pf32Dsc:

4.4.23

4.2.42

	float GET_PF32(float *pf32Src)
	int
	pf32Src:

4.4.23

4.2.43

	float GET_F32(float f32Src)
	int
	f32Src:



1 +1 PLC 2
2 GET_F32 float Src

PLC

FD[40]=GET_F32(fTemp);

dTmp = GET_FU32(Adr2);
GET_FU32(Adr1+20, dtmp)

5

5.1.1

	<code>unsigned short _ycrcModbus(unsigned char *data,unsigned int length)</code>
	Modbus crc
	data: Crc
	Length: Crc
	Crc

5.1.2

	<code>unsigned short _ycrcCcitt(unsigned char *ptr, unsigned int len)</code>
	ccitt
	data: Crc
	Length: Crc
	Crc

6

:

